


DOORPHONE

KDP-602G USER'S MANUAL

■ Name of Each Part

EXPANSION DOOR PHONE (KDP-602G)

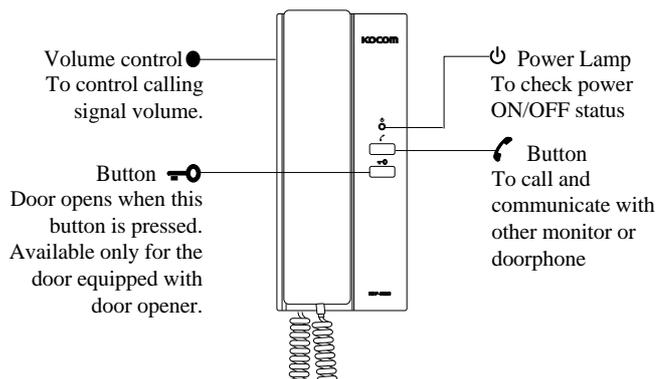

⚠ Precautions for Operation

1. As this device consists of precise electronic components, and high voltage is generated internally, do not attempt to disassemble.
2. Do not drop Indoor or outdoor station, and avoid strong impact.
3. When cleaning, never use wet hands, volatile benzene or paint thinner.
4. Keep away from humidifier and stove. High temperature and humidity can cause malfunction
5. Maintain the product clear by frequently cleaning doorstation with soft cloths
6. Because this Door Phone is operated with only KVM-604, KVM-524G & KVM-514G Video Door Phone, so when you use with other product please install it after inquiry.

■ Specifications

Description	KDP-602G
Electric source	DC 12± 1V Only (From Monitor)
Power Consumption	1.6W(In Load)
Signal Sound	Electronic chime (Dingdong)
Wiring	3 Wired in polarity (KVM-604), Vcc/GND/Audio 4 Wire in polarity (KVM-524G, KVM-514G) Vcc/GND/Audio/Interphone Vcc
Range	50m (φ 0.65mm)Max.
Intercom function	Only available with KVM-524G, KVM-514G


■ Component

- Doorphone
- Wall hanger Panel
- Screw:3 x 12mm=2Pieces

■ Installation

Installation of DOOR PHONE



- A- Choose a place on the wall where you want to hang the DOOR PHONE.
- B- Fasten the wall hanger on the wall.
- C- DOOR PHONE can be hung on the wall hanger easily now.

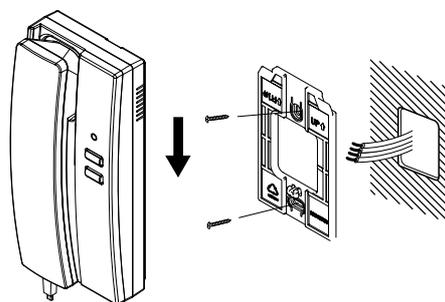

■ How to operate (Instruction for operating)

1. Communication with door camera.
 - (1) The visitor press the call button on the camera.
 - (2) The doorphone is ringing.
 - (3) Pick up the handset and starts communication with visitor.
 - (4) After communication, return the handset.
 - (5) In case, the internal call from extended monitor is made during communication with camera, it is disconnected with camera automatically, as the beep signal sounds in a sec, and makes internal call signal Then it is connected to the monitor which makes the internal call.
2. Internal call and communication
 - (1) Pick up the handset and press button on the doorphone.
 - (2) The extended monitor or doorphone is ringing.
 - (3) Then, if the handset of the extended monitor is picked up, the internal communication starts.
 - (4) In case the internal call is made from the extended monitor, pick up the handset of the doorphone. Then you can starts internal communication.
 - (5) In case, the call is made from the camera during internal communication, it is disconnected with extended monitor automatically, as the beep signal sounds in a sec, and makes dingdong sound. Then connected with camera.
3. Door open
 - (1) Door lock should be equipped and connected with doorphone.
 - (2) Press button on the doorphone after communication, then the door is automatically open.

■ **Wiring Diagram**

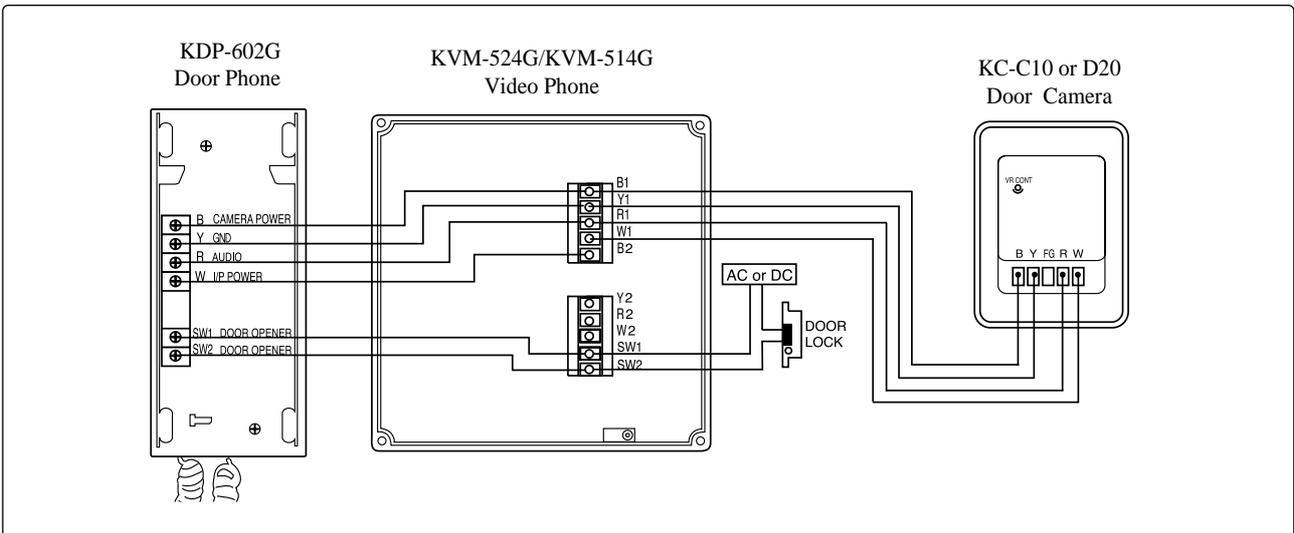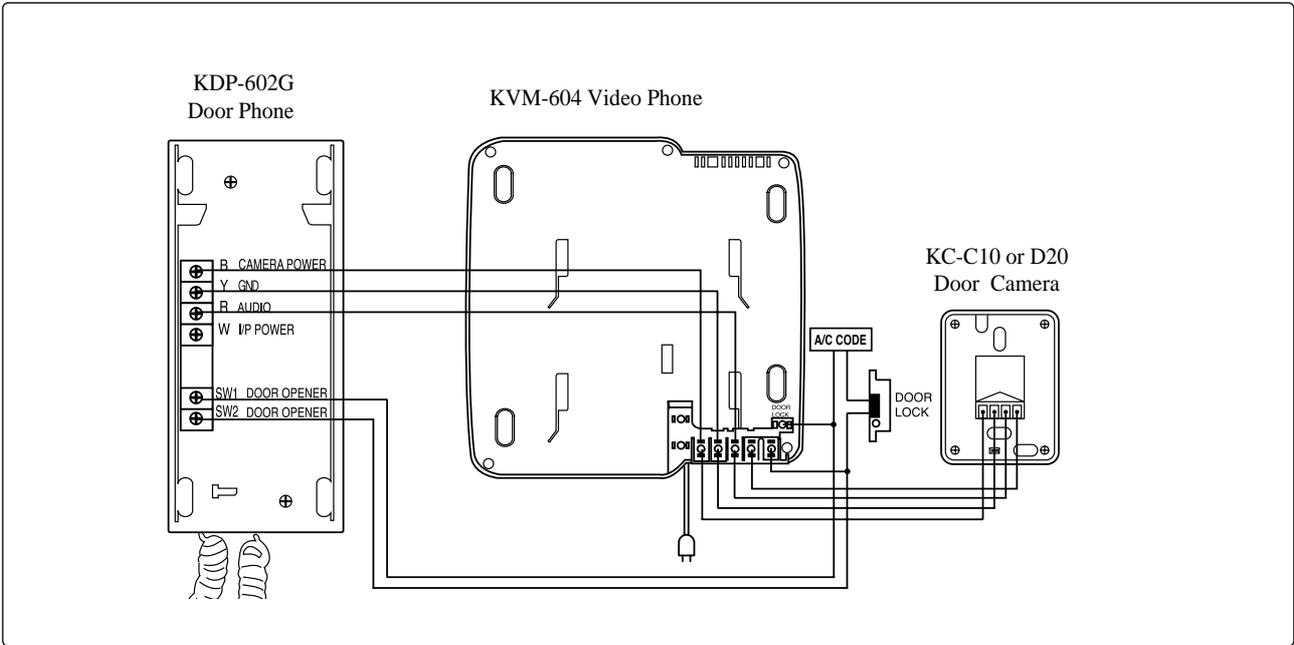

● **Warranty Card**

MODEL	KDP-602G
DATE PURCHASED	
WARRANTY PERIOD	
AGENCY	
AGENCY ADDRESS	

● **KOCOM** Warranties the original purchaser of this product as follows.

- 1) This product is produced under strict quality control and inspection procedures.
- 2) If this product breaks down during proper use as a result of product defect, **KOCOM** will repair it within one year from date of purchase as free of charge.
- 3) The following cases will be subject to charge, even during warranty period:
 - a. Breakdown during transport, or through careless treatment, by consumer.
 - b. Breakdown caused by unauthorized repair, or system modification.
 - c. Breakdown caused by natural disaster or power disorder.